The system.
The Operation: TV.

LOEWE systems

233–28545.020 · Printed in Germany

Contents

Remote control – TV functions **3**

Operating panel **4**

Connections on the rear panel **5**

Welcome **6**
- Thank you
- For your safety
- Equipment of the sets
- Installation and cleaning
- Disposal

First use **7**
- Batteries – Remote control
- Connection
- Switching on
- Switching on for the first time

Daily use **8**
- Switching on/off
- Changing programmes
- Adjusting the sound and picture

Operating the menus and Modes of operation **9 – 12**
- General menu operation 9
- Main information 9
- TV operation and TV menu 9
- Picture in picture and PIP menu 10
- Teletext operation and teletext menu 10
- NexTView/EPG operation and menu 11
- Video mode/video menu 11 – 12

Operation of additional equipment **12 – 13**
- Logging in and connecting
- AV equipment
- Video playback
- Video recorder and DVD player operated directly

What to do when … **14 – 15**

Technical data **16**
- Mechanical data
- Electrical data
- Accessories

Remote control – TV functions

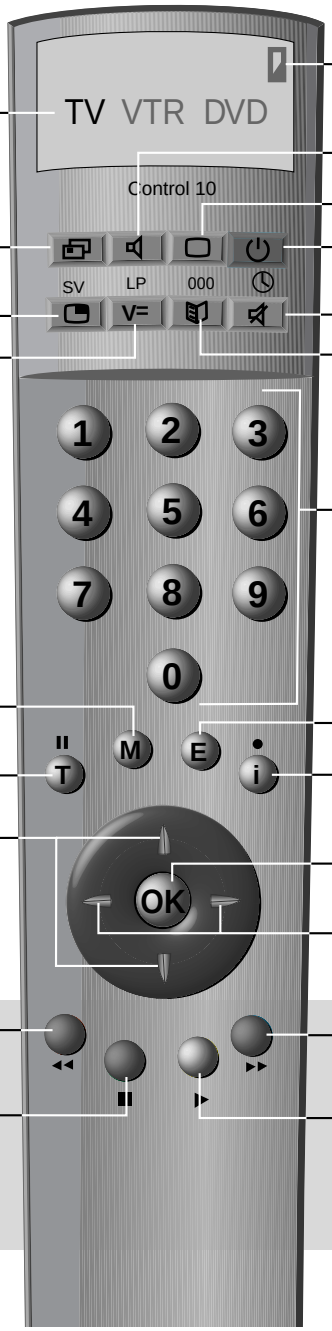

Display batteries empty

Display
direct operation

Sound menu

Picture menu

Direct operation
select for VCR/DVD/TV

Switch on/off
– in standby mode

PIP operation on/off

Sound off/on (Mute)

Video operation with
video operating line
on/off

NexTView/EPG operation on/off

Select programme directly
/in the menu: numeric input

Call up menu
/in the menu: back

Blend in programme, time, title of the broadcast
/in the menu: blend out menu

Teletext on/off

Call up main information
/in the menu: switch info texts on/off

Select programme up/down
/in the menu: select up/down

Call programme overview
/in the menu: confirm

Set volume – / +
/in the menu: select or adjust
left/right

Personal teletext pages
e.g. Economy

Programme info on/off

Set picture format

Last programme

You can assign other functions to these keys for TV operation. Assign these functions in the TV menu under – Settings – Function Keys.

3

Control Panel

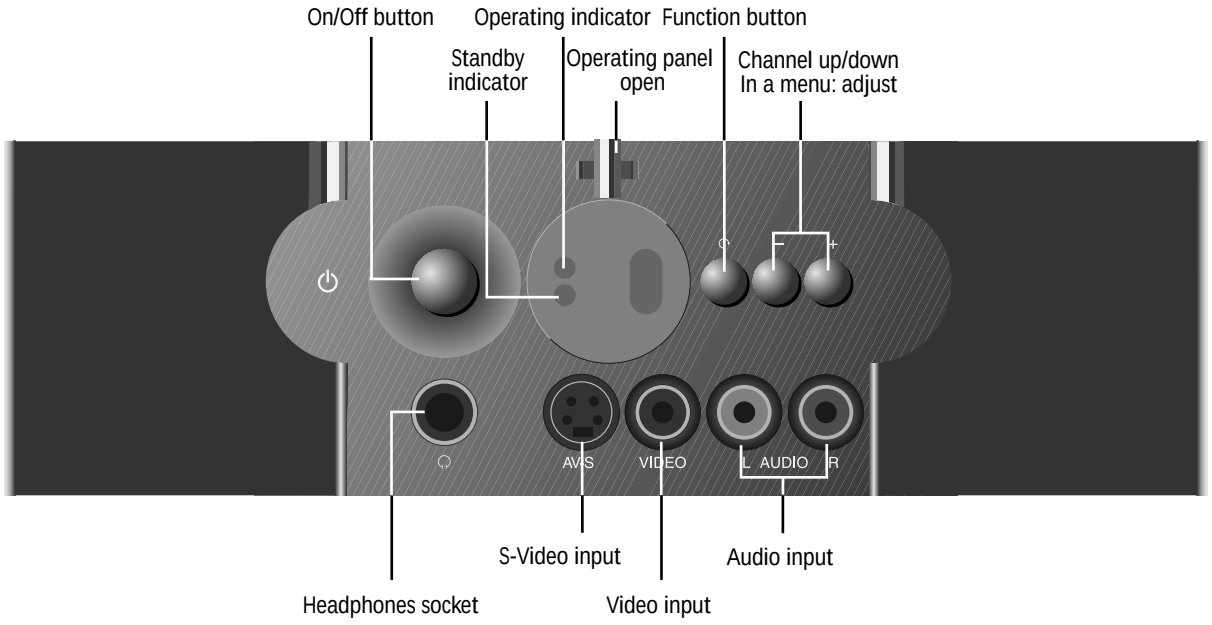

Connections on the rear panel

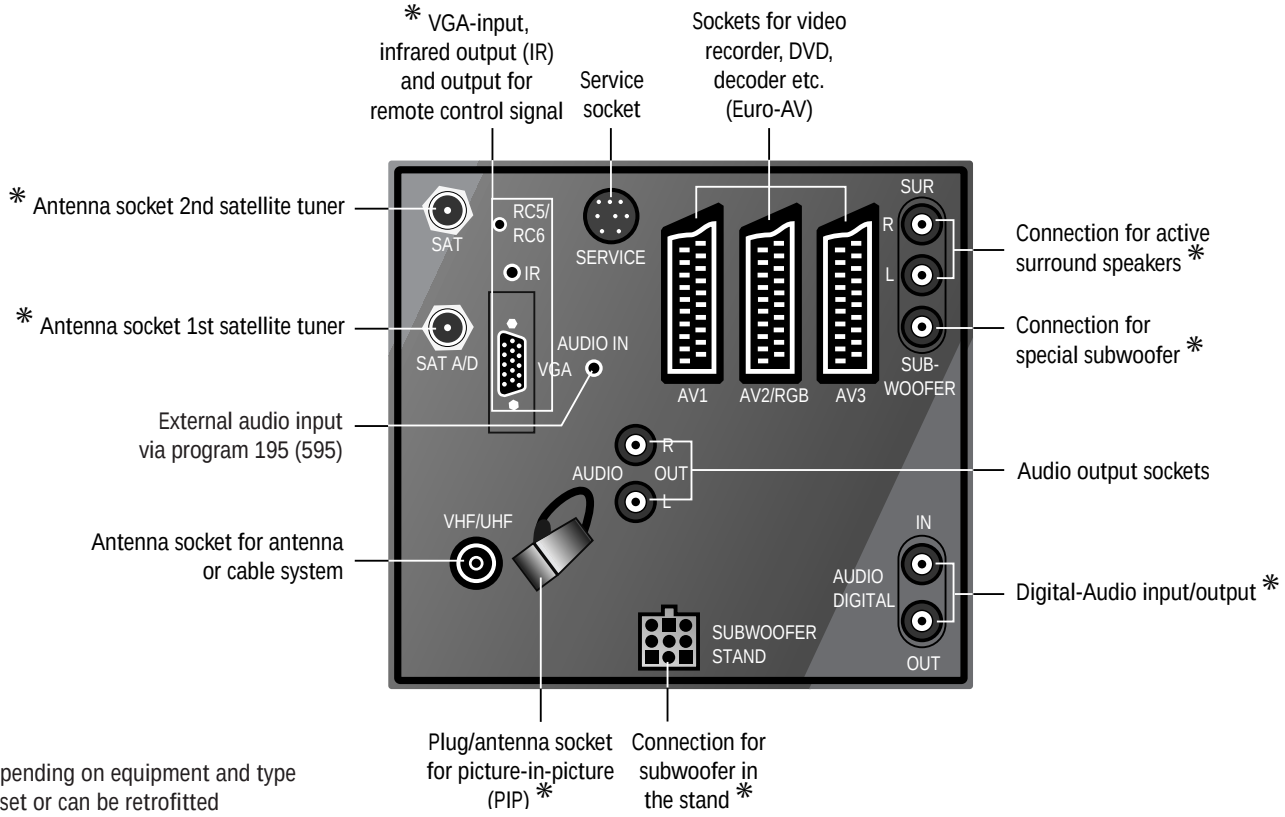

* depending on equipment and type of set or can be retrofitted

Welcome

Thank you,

for choosing a Loewe systems product.
We are happy to have you as a new customer.
At Loewe systems we combine the highest demands on technology, design and user friendliness.
This applies equally to TV, video and accessories.

Neither the technology nor the design shall be an end in themselves but shall rather provide our customers with the highest possible viewing and listening pleasure.
With the design, we have not let ourselves be guided by short-lived fashionable trends.
After all, you have purchased a high-quality appliance which you don't want to get tired of looking at tomorrow or the day after.

About the appliance
We have designed the TV so that you can operate it easily with the aid of the menus. When you need operating information, simply blend in the info texts with the i-key and you will quickly understand the connections.

You will find the answers to many technological questions in your TV's index. As far as the operation of the TV set is concerned, you can call a function directly from the index. There is then no need to read the operating instructions and therefore only the most important operating steps are explained in the operating instructions.

You can control three Loewe appliances with the remote control; in addition to this TV set, a video recorder and a Loewe DVD player.

For Your Safety ...

For your own safety and to prevent unnecessary damage to your appliance, protect it from ...

- liquids and moisture
- jolts and mechanical strain
- magnetic and electrical fields
- cold, heat and strong temperature fluctuations
- dust
- covers which obstruct ventilation
- manipulations inside the appliance

If you have brought the appliance from the cold into a warm environment, let it stand switched off for about an hour due to the possible formation of condensation.
Lightning can damage your TV set via the aerial and the mains supply.
For this reason disconnect the aerial and the mains plug from the sockets during thunderstorms and long periods of absence.
Your new TV has been constructed exclusively for use in the home.
The guarantee conditions cover this normal use of the TV.
Have repairs carried out exclusively by Loewe Service staff.

Equipment of the sets

This operating manual describes the maximum equipment.
The illustrated menu contents may vary depending on the equipment of the set.
You can find out the equipment of your set under Main information – Technical spec. of TV set.

Installation and Cleaning

Place the TV in a location with space for ventilation.

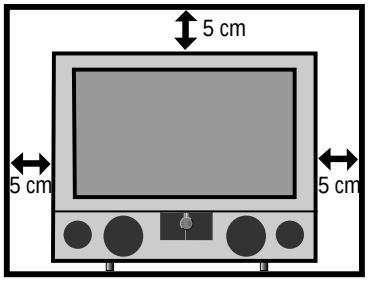

Make sure the quality of the picture is not impaired by bright light or sunlight by reflections.

Pull off the protective foil from the operating panel covers.

You can tilt the screen in a range from 3° – 7°: Turn the rear foot below the casing to adjust the screen to your angle of view.

Clean the TV set and the remote control with a damp, soft, clean cloth (without any aggressive or abrasive cleaning agents).

First Use

Batteries – Remote Control

To insert or replace the batteries press where the arrow is imprinted. Slide the battery compartment cover downwards and remove it. Insert batteries of type Alkaline Manganese LR 03 (AAA) and make sure + and – poles are the right way round.

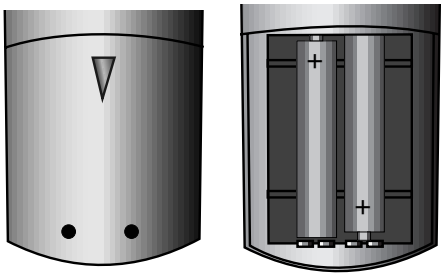

Then push the cover back up.

The remote control display appears only when you press a button. If you no longer operate it, the display switches off again after 20 seconds.

Replace the batteries when the „Batteries empty“ can be seen in the remote control display.

Notes on battery disposal:

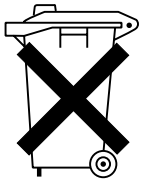

The original batteries do not contain any pollutants such as cadmium, lead and mercury. Used batteries do not belong in the domestic waste. They must be taken to the appropriate collection points according to the national laws. Ask your dealer.

Connection

Power supply
Connect the TV set to a 230V/50–60 Hertz socket.

Antennas
Connect your antenna or cable system to the VHF/UHF antenna socket.
Plug the antenna plug which emerges above the antenna socket in the antenna socket for the PIP tuner.
If the set is equipped with one or two satellite tuners, connect the Sat antennae to the SAT sockets (see fig. page 5).

Switching on

The TV's On/Off button is located behind the cover of the control panel. Press here to open the control panel ...

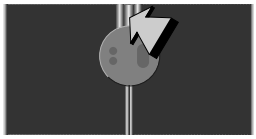

Press the On/Off key so that it clicks into position.

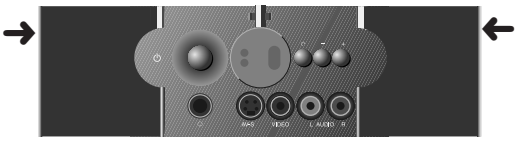

Push both sides of the control panel together to close it.

Switching on for the first time

The TV's automatic programming is activated the first time you switch it on.
First you have to select the menu language for your TV set. Then specify which antenna you have connected to your TV and in which country you are operating it.
Follow the menus and then start the automatic programming.

Select the settings with the arrows on the rings ...

... confirm your settings with **OK**. You then come to the next menu ...

... Press this key if you need information about the settings.

Use the pre-programmed satellite stations if necessary, otherwise they will be erased.
Once you have answered all the questions for the automatic programming your settings will be displayed.
Check whether everything is correct. Then start the automatic programming with the **OK** key.
The TV searches for and sorts all programmes which can received by your antenna system.
You see the programme preview after the automatic programming.
You can repeat switching on for the first time at any time, e.g. after moving house or retrofitting satellite tuners. Call the index in the Main Information (**i**-key). Then select the index item "First installation repeat". Then start "First time switching on" with **OK**.

Daily Use

Switching On/Off

Your TV set is equipped with an eco-standby power supply unit. The power consumption in standby operation drops to below 1 Watt.
This means using 30% less energy than with conventional appliances.
If you want to save even more energy, switch off the TV with the On/Off key. This disconnects the TV from the mains.

If the TV is switched on, you can switch it to standby with the blue On/Off key on the remote control. The red standby indicator on the set lights up. If the green indicator is also alight, a timer recording has been programmed or Sat radio is activated.

From the standby mode you can best switch on again with the blue On/Off key or with a number key (programme 0-9). The green operating indicator then lights up.

With OK you switch on the TV, see the programme preview and can select a programme.

The TV's ON/Off button is behind the cover of the control panel.

If you switch off the TV with the On/Off key on the set, none of the indicators lights any more.

Switch on the TV with the On/Off key on the set if it is switched off.

Changing Programmes

Programmes up/down

With the numeric keys on the remote control

1-digit programmes
Keep the 0 – 9 key pressed for one second, the programme then changes immediately.
Or tap the 0 – 9 key, the programme then changes after 2 seconds.

long

short long

2-digit programmes
Keep the second number key pressed for one second, the programme then changes immediately.
Or press both number keys, the programme then changes after 2 seconds.

short short short

3-digit programmes
press all three number keys, the programme then changes immediately.

short short short

All programmes can be entered with three digits, e.g. 007 for 7.

Call Audio/Video programmes

short or long

for playback of AV-equipment (see page 13).

By the programme preview

Call up the programme preview with **OK**

Call up programme

Select

Adjusting sound and picture

Adjusting the volume

Adjusting the volume

Call up the Sound menu

Call up the Sound menu

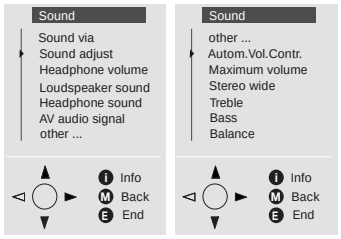

Select the Sound function

Adjust

Call up the Picture menu

Call up the Picture menu

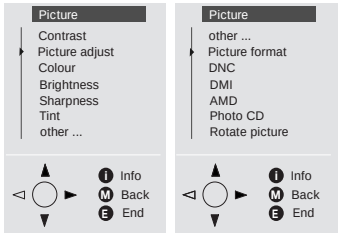

Select the Picture function

Adjust

Operation of the Menus and Modes of Operation

General menu operation

Call up the menu (graphic user guidance), different menus are displayed depending on the mode of operation of the TV (TV, PIP, Video, Teletext or NexTView/ EPG).

In TV mode without blend in, you will see the **TV menu**.
If Picture In Picture is activated (green frame), you will see the **PIP menu**.
If the video operating line is blended in, you will see the **Video menu**.
If you have switched over to teletext, you will see the **Teletext menu**.
If you have blended in EPG, you will see the **NexTView menu**.

select a menu item up/down

set or operate a selected function left/right

... or

... call selected sub-menu with **OK**

... Blend info texts in/out if these are offered

back to the previous menu level

blend out menu

You can see which keys you can operate in the menu at the bottom of the respective menu.
In addition, the coloured function keys have different functions in every mode of operation.

Main Information

Call up Main Information ...
(no menu display activated)

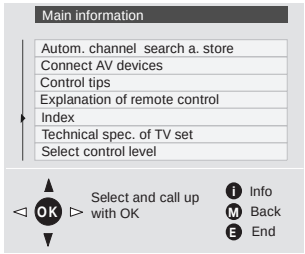

In the Main Information you will find for example:
The **index** contains technical terms and answers many of your questions concerning the TV. If it's a question about operation you have direct access from the index to the menu of the operating function.
The **Explanation of the Remote Control** shows the function of every key for the different operating modes of the TV and the remote control.
Loewe systems TV sets are available in different equipment variations. You can find out how your TV set is equipped under the menu item "**Technical spec. of TV set**".

select up/down ...

call up sub-menu selected with **OK** or confirm selection

... blend info texts in/out if these are offered

back to the previous menu level

blend out menu

TV Operation and TV Menu

TV-mode/TV exists when none of the operating modes picture-in-picture (PIP), Teletext, NexTView/EPG or Video is activated.

Call up the TV menu ...

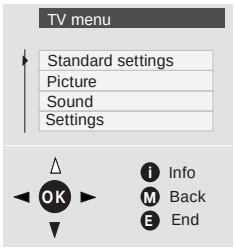

In the TV menu you will find everything you need to know about the TV settings.

Function of the colour keys in TV mode
You can assign your own functions to the four colour keys. The following functions are set at the factory:

red, list or call up personal teletext pages

green, call up Picture format menu

yellow, call up last viewed programme

blue, call up programme info

Other functions for the colour keys
You can assign other functions to the keys under the menu item "Settings"– "Function keys".

Picture In Picture Mode and PIP Menu

Blend PIP picture in/out

Function of the colour keys in Picture In Picture mode

red: PIP still frame on/off

green: switch between PIP and TV mode. With multi-PIP additional selection which small picture is active. This marks in which picture a programme is to be changed and which picture is to appear as a moving picture in multi-PIP. If the PIP picture has a green frame, the TV set is in the PIP mode, if it has a white frame the TV is in the TV mode.

yellow: replace active PIP picture with TV picture

blue: Start/stop Play PIP programmes; in multi-PIP: Update PIP pictures one after another

PIP menu

blend in PIP menu

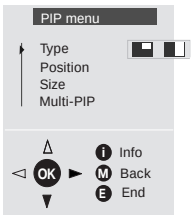

In TV sets with 16:9 screens the Split Screen function can be set (type: right symbol). The PIP picture is shown in full height on the right side of the screen. Multi-PIP is only possible in sets with a 16:9 screen.

Teletext Mode and Teletext Menu

Teletext on/off

Function of the colour keys in Teletext

The coloured bars at the bottom of the teletext show you to which chapters you can turn.

red: back to previous page

green: turn to next page

yellow: turn to next chapter (only with TOP and FLOF)

blue: turn to next main chapter (only with TOP and FLOF)

TOP and FLOF are teletext operating systems. Loewe TV sets use both systems if they are transmitted.

The menu lines underneath the coloured bars show you other possibilities, fast selection of pages:

Mark a page number specified on the teletext page ... and ...

... show with **OK**

scroll in the stored sub-pages. You can see which sub-pages are already stored in the bottom line of the menu.

Only pages marked as sub-pages by the station are stored. Unmarked pages change automatically.

Further teletext functions

enter page number directly

hold self-changing sub-pages (HOLD)

adjust size: top part – bottom part – normal size

to Overview page 100

blend PIP picture in/out

call up TOP table with **OK**.The TOP table is an overview list of the teletext programme. The table can only be called in stations with TOP operating system.

... select subject areas in the TOP table and ...

... call up with **OK**

Teletext menu

blend in Teletext menu

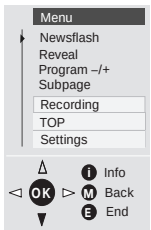

You will find other functions in the Teletext menu such as: display "New Message", "Unselected cover" hidden information, switch to other teletext programmes (if another tuner is available) and enter 4-digit sub-page number directly.

NexTView/EPG Mode and NexTView Menu

NexTView and EPG (Electronic Program Guide) assist you when selecting programmes.

NexTView/EPG on/off

Select starting time or day

Select station

Switch over to marked station with **OK**. If the programme starts later, it is marked (up to 10 programmes). If the programme is already marked, the mark is erased.

Function of the colour keys in NexTView/ EPG mode

red: Prepare recording for the marked programme

green: List other days for the EPG list. Press green again to select the time

yellow: Blend in Theme selection

blue: Show programme preview for the programme. Press the blue key again to show all programmes.

Other NexTView/EPG functions

Detail: Show detailed programme info for selected programme

End: End NexTView/EPG, back to previously viewed programme

NexTView/EPG menu

Blend NexTView menu in/out

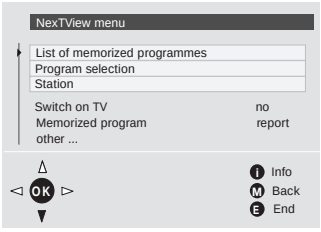

In the NexTView menu you can call an overview of the marked programme, delete individual programmes if necessary and makes the basic settings for the EPG.

Notes: The program data entry for NexTView/EPG takes place during the night between 2 am and 5 am provided that the TV set is switched off in standby mode. Data entry is not possible if the TV set is switched off with the mains switch or if the mains plug is removed during this period. As a result, there is no programme data available for NexTView on the following day. If you switch off the TV set in standby mode, data entry is performed after 2 minutes. The red and green indicators illuminate on the control panel. Data entry takes 1 hour, or longer on TV sets with DVB module.

The program data entry also takes place when you watch a program which transmits NexTView/ EPG data, e.g. RTL2 or PRO7, during this time. Data entry for analog Premiere is not possible.

If you cannot receive programs with NextView/ EPG, you should set “Data entry off” under “Others” in the nexTView menu. The memory for the Teletext pages can thus be used.

Video Mode/Video Menu

Exclusively for operating Loewe video recorders with Digital Link and Loewe DVD players (connected to one of the AV-aided sockets).

Blending the video operating line in/out

If you have logged in a video recorder or a DVD player, you will see a video operating line for every connected appliance.

Select the video operating line if several video recorders or one DVD player and at least one video recorder are connected

Select function

Execute selected function with **OK**

Switch appliance on/off

AUX Select the video input (Euro-AV socket) for the video recorder

Rewind (VCR only) or reverse search

STOP

PLAY

Fast forward (VCR only) forward search

Pause/Still

→

Operation of additional equipment

Logging In and Connecting Audio/Video Equipment

Next chapter on DVD

Previous chapter on DVD

Recording (only with VCR):

The channel currently selected is recorded. Now you cannot switch to another channel (locked). The lock is only released when you stop recording.
Exceptions:
1. You have installed several tuners (not PIP tuner) in the TV set, then you can view another channel with the second tuner.
2. You can also view the signal (e.g. of a DVD player or another video recorder playback) via an AV connection.
3. With a video recorder with Digital Link Plus, the tuner of the video recorder is used to record.

Video menu

Blending in the video menu

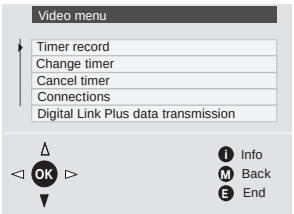

In the Video menu you have the possibility of setting the timer for recording TV programmes with a connected video recorder. In the "Connections" menu you can log in other AV equipment.
"Digital Link Plus data transmission" is used to transmit the station data of the TV set – without a satellite transmitter – to the video recorder (is only displayed if a Digital Link Plus Recorder is logged in and connected).

First log in the appliances you want to connect in the Main Information under the menu item "AV connections". The TV set creates a connection diagram showing you which sockets you can connect your AV equipment to.

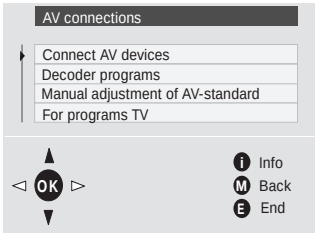

First select "Connect AV equipment".

Press **OK**

You see a connection diagram: e.g. a standard video recorder connected to the EURO AV socket 1.

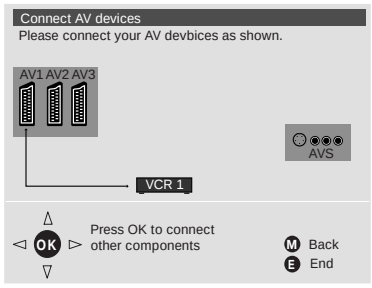

If you have other or more appliances, press **OK**.

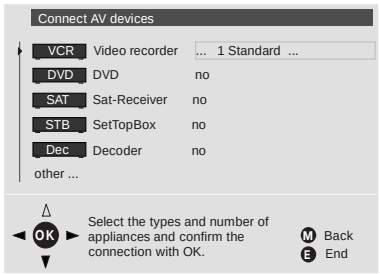

Now select the number and type of appliances you want to connect from the list.

If, for example, you have selected two Digital-Link video recorders, one decoder, one DVD player and one camcorder, press **OK**.

A new connection diagram is displayed according to the selected video recorders.

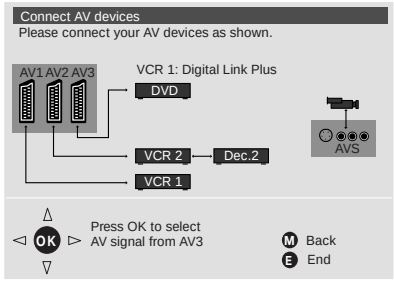

Press **OK** to set the signal type for the connected VCRs (automatic detection of VHS/SVHS, VHS/8mm or SVHS/Hi8 for video recorders; automatic detection of FBAS, YC, RGB etc. for other VCRs).
If a Pay-TV-Decoder is connected, you must specify the Pay TV programme in the "Decoder Programs" menu in the following menu.

Connect your equipment as shown in the menu.

→

A video recorder with Digital-Link Plus must be connected to the EURO-AV socket 1.
A DVD player must be connected to the EURO-AV socket 3.

Depending on which video recorder is selected, the TV set sets the signal type.
The AV norm is also set according to the country selected the first time the set is switched on.
If you need a different AV norm for the set to be connected, e.g. NTSC, set this in the menu "Manual adjustment of AV-standard". If you want to connect equipment which is not listed in the connection diagram, select in the "AV connections" menu – "Connect AV devices" **OK** and the line " – "Other component to AV ..." under "other". The AV connection is displayed in the connection diagram. Press **OK** and then select the **signal type**, e.g. RGB or Y/C.

Video Playback

Press, the AV programme last used is set and the AV selection blended in.

Select to play from another video recorder through the AV sockets or the programme of the video recorder (channel 36) through the antenna socket.

You can call up the AV programmes as usual with the programme keys or with the programme preview. The programmes are:
000 (000) for video recorder, playback via antenna input
199 (599 in DVB) for EURO-AV 1,
198 (598 in DVB) for EURO-AV 2,
197 (597 in DVB) for EURO-AV 3,
196 (596 in DVB) for the front socket AVS,
195 (595 in DVB) for the VGA socket

You can also use every other programme number for video playback if a switching voltage is transmitted by the AV appliance during playback and you allow the switching voltage in the "AV connections" – "For TV programmes" menu.

Operating the Video Recorder and DVD Player Directly

You can also switch over the remote control of the TV for direct operation of the Loewe video recorder and Loewe DVD player.

Select the appliance to be operated:

For video recorder

VTR in the remote control display

Press again for DVD ...

DVD in the remote control display

If you switch to another appliance (e.g. by mistake), the television can naturally not be operated. Then switch back to TV or wait 20 seconds until the remote control automatically switches back to TV operation. If the video recorder or the DVD player is no longer operated (after 20 seconds) the remote control display switches off and back to TV operation.
Note: With the Loewe video recorders VV3600H, VV8500H and VV5000M, you use the original remote control or the video control line which you call with the **V=** key.

What to do when ...

Problem	Possible cause	Remedy
Various menu items such as “Settings” in the TV menu, “Connections” in the video menu, Teletext-, NexTView/EPG and PIP menu are not displayed	“Simple control” activated in the Main information	Deactivate “Simple control” in the Main Information, press the **i**-key, select “Select control level” and call up with **OK**. Set “Simple control” to “no”.
Setting “Connect AV devices”, “Connections”, “Timer record”, “Change timer” or “Cancel timer” are not displayed	a) Timer recording is in progress b) You are in the process of recording from the TV set with the video operating line c) No video appliances is logged in	a) Wait until the timer recording has finished or clear timer (then the recording is aborted!). b) Wait until you stop the recording. c) The recording and timer functions are only possible if video recorders are logged in.
In the TV menu, the menu item “Programs” is missing and in the Main Information the item “Automatic channel search a. store”	The child lock is activated. If these menus were accessible, children could still set the programmes.	Deactivate the programme-related child lock. Switch off the child lock inn the TV menu - Settings.
Control of the Loewe video recorder via the video operating line and the timer do not work properly or not at all	a) The Digital Link function in the video recorder is not activated or not possible b) Euro AV cable not connected	a) Activate Digital Link in the video recorder (see operating instructions of the video recorder, in newer video recorders in the menu under “Settings”) b) Connect the Euro AV cable.
General problems connecting external appliances through an AV input	a) The appliance is not logged in in the “Connect AV devices” menu or connected differently to that shown in the connection diagram b) The AV norm is set incorrectly c) The AV signal is set incorrectly	a) Compare the connection diagram with the actual installation in the Main Information under “Connect AV devices” and connect as shown or re-log in. b) Set the norm correctly. c) Set the AV signal correctly. If “Automatic” is set for AV norm or AV signal this can lead to incorrect detection for signals outside the norm. Then the norm and the signal must be set according to the specifications in the operating instructions of the external appliance.
Picture shifted horizontally	The TV set is located in the Southern hemisphere (e.g. Australia, South Africa)	Adjust horizontal position: a) Call main information with **i**-key b) Call Index - Adjust picture - Move horizontal c) Adjust horizontal picture position.

Problem	Possible cause	Remedy
Connection of a decoder does not work or malfunctions	a) The signal is not decoded because in the Main Information - Connect AV equipment - Decoder-channels - For decoder connected to AV ... the decoder channel locations are not marked in blue b) There is no sound in decoder mode because in the Main Information - Connect AV equipment - Decoder channels - Sound via AV socket ... - is not set correctly	a) In sub-item „For decoder connected to AV ...“ mark the channel locations at which the decoder is necessary. b) Correct setting (see decoder instructions).
No sound over the TV loudspeakers	a) In the Sound menu the item „Sound via …“ under „Sound“ is set to „hi-fi-system“ b) In appliances with a 9-pin cubic socket at the rear, nothing is connected to this socket	a) Change setting to „TV“. b) Either a dummy plug with bridges or a Loewe Subwoofer has to be inserted in the cubic socket.
All menus appear in the wrong language	Menu language was accidentally set incorrectly.	Set your menu language: 1. Switch off Picture In Picture (PIP) and all fade-ins, press the **E** key 2. Call up the TV menu, press the **M** key 3. Select the last menu item and press the **OK** key 4. Select the last menu item on the last page and press the **OK** key 5. Now select the correct language and 6. ... confirm with **OK**.
Digital Link Plus does not work	a) The video recorder was not logged in as a Digital Link Plus appliance or was connected to the wrong socket b) Euro AV cable not fully wired (pin 10 not wired) c) A few video recorders can only take over the station when the TV appliance is switched on for the first time d) All or a few terrestrial and cable channels are stored at channel locations ≥ 99	a) Log in the Digital Link Plus video recorder under „Connect AV equipment“ and connect as shown in the diagram. b) Change the Euro AV cable c) Restore delivery condition of the video recorder (see operating instructions for the recorder) d) Re-allocate terrestrial and cable channels so that they are between 1 and 99.
Various characters are displayed incorrectly in teletext	The wrong character set was set in the teletext menu	Set the correct character set: Teletext Menu – Settings – Standard or the corresponding character set for your language.

Technical Data

Mechanical Data

Ergo 6770 ZP	Part number 59448
Credo 7670 ZP	Part number 59453
Dimensions (cm)	69,5 x 59 x 53,5 (B x H x D)
Weight (kg)	39,5
TV tube	Super Flat-Line
Format	16 : 9
Screen class	70 cm, visible 66 cm
Ergo 6772 ZP	Part number 59449
Dimensions (cm)	67,5 x 58 x 52,5 (B x H x D)
Weight (kg)	44
TV tube	Super Flat-Line
Format	4 : 3
Screen class	72 cm, visible 68 cm
Ergo 6781 ZP	Part number 59452
Credo 7681 ZP	Part number 59459
Dimensions (cm)	79 x 65 x 59,5 (B x H x D)
Weight (kg)	53
TV tube	Super Flat-Line
Format	16 : 9
Screen class	81 cm, visible 76 cm

Electrical Data

Chassis designition	MediaPlus Q 2400
Frame repetition frequency	PAL/Secam 100 Hz
	PAL 60/NTSC 60 Hz proscan
Full Digital 100	AMD*/DMI, DNC adjustable
Power supply	220 V to 240 V / 50-60Hz
Power consumption	Operating ca. 125 Watt
	Standby < 1 Watt
	Sat-Standby < 60 Watt
Ambient temperature	5° – 40° Celsius

Tuner VHF/UHF/ Cable		
(hyperband 8 MHz)		42 MHz to 860 MHz
Programme memories *		200/in DVB 600
TV standards		PAL B/G
		PAL D/K, PAL I, PAL L, PAL N/M, PAL 60
		Secam B/G, D/K, L
		NTSC / NTSCV
Sound standard		Mono/Stereo/2 Sound
		*Nicam B/G/ (L)
Rated audio power		2 x 18 Watt / 4 Ohm
Audio music power		2 x 40 Watt / 4 Ohm
Teletext		HiText (Level 2.5)
Connections		
Mini-DIN (Front)	Video IN	S-VHS / Hi 8
Phono (Front)	Video IN	VHS / 8 mm
Phono (Front)	Audio IN	L + R
Jack 6,3mm (front)	Headphones	32 – 200 Ohm
Jack 3.5mm	Audio IN	L + R
IEC-socket 75 Ohm		Aerial / cable
EURO 1	Video IN/OUT	S-VHS / Hi8
	Video IN/OUT	VHS / 8 mm
	Audio IN/OUT	L + R
EURO 2	Video IN/OUT**	S-VHS / Hi8
	Video IN/OUT	VHS / 8 mm
	Video IN	RGB
	Audio IN/OUT	L + R
EURO 3	Video IN	S-VHS / Hi 8
	Video IN	VHS / 8 mm
	Video IN	RGB/YUV
	Audio IN	L + R
Phono	Audio OUT	Level adjustable/fix
Cube socket 9-pole		Subwoofer
Phono*	Subwoofer OUT	LFE-signal
Phono*	Surround OUT	L + R
Phono*	Dig. Audio IN	multi-channel signal
Phono*	Dig. Audio OUT	multi-channel signal

* depending on equipment and type of appliance

** OUT only in Digital Link Plus video recorder

Available Accessories

Ergo Soundbox with Subwoofer
For improved sound, shelf for video recorder and DVD player.

Credo Stand (foot) with active-Subwoofer
and shelf for a video recorder and DVD player

Systems Rack 1
Rack system with glass shelf for video recorder or DVD.

Single-/Twin-Sat tuner and Digital TV module
Your TV set can be retrofitted with the integrated satellite tuner 6 and the TV-Digital module. This enables the reception of analog and digital satellite programmes.
Therefore a wide range of freely receivable digital satellite programmes are available with maximum picture and sound quality.

Dolby Digital Decoder AC3 (equipment of the set Credo 7681ZP/H)
for multi-channel reproduction from the DVD player in Dolby Digital cinema quality. The Dolby Digital Decoder is integrated in the TV set.

VGA retrofit kit for connecting a PC
this turns your TV into a VGA monitor.

The key number 3001 deletes the secret code and cancels the child protection

Printed in Germany
3/05.00/5,0
Subject to modifications!